



EcoOnline™ Timed 12V/24V Solar Regulator

***For the EcoOnline Solar Kits using the
1R/10Amp/24V/T
Solar Charge Controller***

Installation Manual & User Manual - Revised 23/05/2017



Optex Solar Pty. Ltd.
ABN: 88 128 228 884
www.EcoOnline.com.au
email: info@EcoOnline.com.au

© Copyright 2012 Optex Solar Pty Ltd. All rights strictly reserved. This publication is protected by copyright law and unless otherwise specified is for your personal and non-commercial use only. No part of this publication may be reproduced or distributed by any process, electronic or otherwise, without the specific written permission of Optex Solar Pty Ltd. Trademarks appearing in this manual are the sole property of Optex Solar Pty Ltd or their respective owners. Nothing in this publication shall be construed as granting any express or implied license to use any intellectual property of Optex Solar Pty Ltd otherwise than for personal and non-commercial use only. Optex Solar Pty Ltd must not, to the full extent permitted by law, be held liable for any claim, cost (including legal costs), damage, expense, loss (including fines, penalties, set-offs and consequential loss) or liability arising from the use (or misuse) of any product described in this publication, unless expressly provided otherwise in this publication. Information as well as any products described in this publication are subject to change without notice.

Contents

1	Key Terms.....	3
2	Safety Requirements.....	4
3	Warranties	5
4	Included Kit Components (depending on the kit purchased)	5
5	Designing Your Charging System.....	6
6	Connecting the Load Direct to Battery or Through the Regulator.....	6
7	Recommend Position of Regulator	7
8	Fuse and Technical Wiring Diagrams	8
9	Fuse Assembly.....	8
10	Solar Panel Wiring.....	10
11	Connecting the MC4 Connector.....	13
12	Mounting the Solar Panel(s)	14
13	Mounting the Charging Regulator	15
14	Regulator Connections.....	15
15	Wiring and Connection Order	16
16	Auto Voltage Selection - 12V or 24V System	16
17	Lap Splice Soldered Connection.....	17
18	Connector Dismantling Procedure (if required)	18
19	System Grounding.....	19
20	Regulator Specifications.....	21
21	Operating Instructions	22
22	System Maintenance.....	24
23	Trouble Shooting Guide	24

1 Key Terms

Congratulations on the purchase of your EcoOnline™ Solar Regulator Kit. Please print this manual out for your reference. Please take the time to read the manual before starting any work. Particular attention should be given to text contained in the following key terms.

Please note EcoOnline has a strong product safety policy; do not install products without reading safety guidelines in the manual. Please report any product safety issues or near misses to info@EcoOnline.com.au no matter how trivial.



DANGER

Indicates a **SAFETY** issue that **is likely to** cause injury or death if the user does not follow the instructions.



WARNING

Indicates a **SAFETY** issue that **may** cause injury or death if the user does not follow the instructions.



CAUTION

Indicates a **SAFETY** issue that **may** cause injury or property damage if the user does not follow the instructions



Read Carefully

Refers to **critically important** information related to the **correct functioning** of the system.



Tip

Refers to useful information for the **optimal operation** of the system

2 Safety Requirements



DANGER

Lead acid batteries generate dangerous explosive gases during normal operation; always provide adequate ventilation to the outdoors. Wear eye protection and gloves at all times when working around lead acid batteries. Be mindful of sources of ignition such as sparks from shorts, fuses, open flames or cigarettes. Note: batteries store a large amount of energy. Never short circuit a battery's positive (+) and negative (-) terminal. Have fresh water available to wash and clean any contact with battery acid.



DANGER

When sizing your solar array and battery you must check that the maximum current produced by the chosen solar panel(s) array can never exceed the maximum allowable charging current for the battery being charged. Always follow the battery manufacturer's charging instructions. Please note: panels can produce up to 30% more power than the panels rated power under extraordinary solar conditions.



WARNING

EcoOnline recommend de-rating the regulator. Solar panel wattages and connected loads should **not exceed: 120W solar power (at STC for a 12V system) or 7.5Amp continuous load** for the **10Amp regulator**. If appliances are connected to the battery through the regulator, then the **total surge start up current** from all connected appliances should not exceed the 10Amp rated current for the regulator.



WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.



WARNING

This regulator is to be used for charging Sealed (AGM), Gel or Flooded **Lead-Acid** type batteries **only**. Not to be used for charging any other battery chemistries apart from **Lead-Acid**. You should check that the **maximum voltage** of the charging profile you select does not exceed the battery manufacturers recommended maximum charging voltage.



WARNING

Always use appropriate gauge wires. Never exceed the rated **Ampacity** (amp rating) of a wire. Keep in mind that **wires situated in highly insulated environments cannot dissipate heat** and hence will have a much lower Ampacity. This could lead to a fire hazard.



WARNING

If you are unskilled in making safe electrical connections, we recommend all electrical connections be carried out by a certified electrician. **Loose, corroded or fatigued electrical connections can become resistive and overheat creating a fire hazard.**



WARNING

An appropriate fuse must be installed on the positive **regulator to battery** connection. Some batteries and/or **banks of batteries connected in parallel** are capable of very high short circuit currents and **may also require a current-limiting fuse**. You should check with your battery supplier as to the type of recommend fuse.



WARNING

Do not expose this regulator or system components including solder joints to water and/or high humidity and/or corrosive environments such as those involving marine applications.



WARNING

Always disconnect all connections to the regulator before attempting any maintenance or cleaning to reduce risk of electric shock. Note: there are no serviceable parts inside the controller; do not attempt to repair the controller. Incorrect re-assembly can cause fire.



WARNING

Only use 12V “nominal” (36 cell) solar panels with this regulator. Or 72 cell panel(s) for a 24V system.



WARNING

What follows are general installation guidelines, **they should NOT be taken to be appropriate for all installation situations**, if in doubt please seek advice from a certified electrician.

3 Warranties

EcoOnline™ offers the following Warranties

- 3 year limited Warranty on all Regulators

See EcoOnline.com.au [Terms and Conditions](#) page for further details.

4 Included Kit Components (depending on the kit purchased)

			
10Amp Solar Charging Regulator	Two core 1.0mm ² -1.5mm ² 5m Solar Wire (10Amp)	Single core 2.5-4 mm ² Wire	10Amp Fuse holder, 15Amp fuse kit.

5 Designing Your Charging System

Firstly, please visit our online sizing calculators to size your system. They will help you understand important factors involved in sizing a solar charging regulator system. **(Do not assume the supplied components are suitable for all situations!)**

1. [Solar Panel Sizing Calculator](#) (this will help you understand the factors involved in a **sizing solar panels**)
2. [Solar Regulator Calculator](#) (this will help you understand the factors involved **sizing a regulator**)
3. [Solar Wire Sizing Calculator](#) (this will help you understand the factors involved in **sizing wire gauges**)




WARNING

A charging system must be sized right, for efficiency, reliability and **safety**. If in doubt please seek advice.

6 Connecting the Load Direct to Battery or Through the Regulator

The first choice you have to make is whether you will be connecting your 12V/24V load direct to the battery or through your regulator.

Solar Charging Setup Options

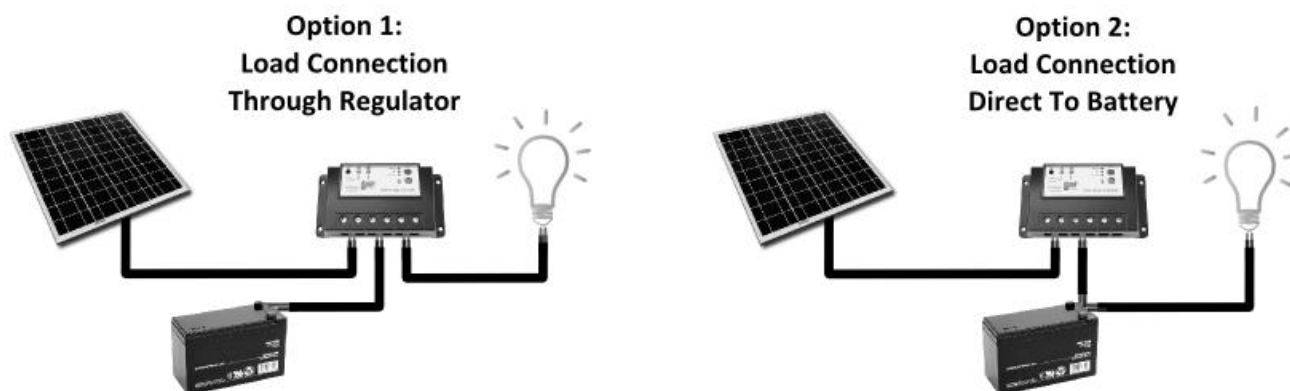

Option 1: (Recommended) Advantages	Option 2: Advantages
<ul style="list-style-type: none">* Regulator will protect the battery from low voltage deep discharge* Regulator can control the load running time overnight	<ul style="list-style-type: none">* Regulator and regulator to battery wire need only be sized to the maximum power of the solar panels
Option 1: Disadvantages	Option 2: Disadvantages
<ul style="list-style-type: none">* Expensive high gauge wire will be needed if you have a high power load and a long battery to regulator distance* You'll need to size your regulator to handle the load	<ul style="list-style-type: none">* No deep cycle protection for the battery* Needs extra timing devise if you want a timed system

7 Recommend Position of Regulator

We recommend the regulator be positioned near the battery.



WARNING

The regulator **should not** be mounted in the same compartment as flammable objects or items that can leak flammable gas or vapour, such as lead-acid batteries, solvent, gas or oil sources. **If installing in the same compartment as lead acid batteries there should be sufficient ventilation.**



WARNING

Do not allow the regulator to be exposed to rain or moisture.




Tip


Please note: when choosing a location for the regulator it is preferable that the regulator and battery compartments have similar ambient temperature characteristics so that the temperature compensation function on the regulator functions accurately.

8 Fuse and Technical Wiring Diagrams

Wiring Diagram for:
Load Through Regulator System

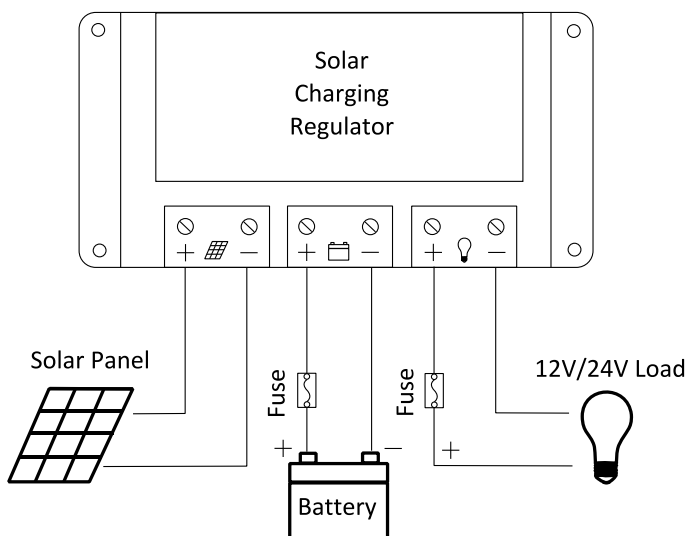

Wiring Diagram for:
Load Direct from Battery System

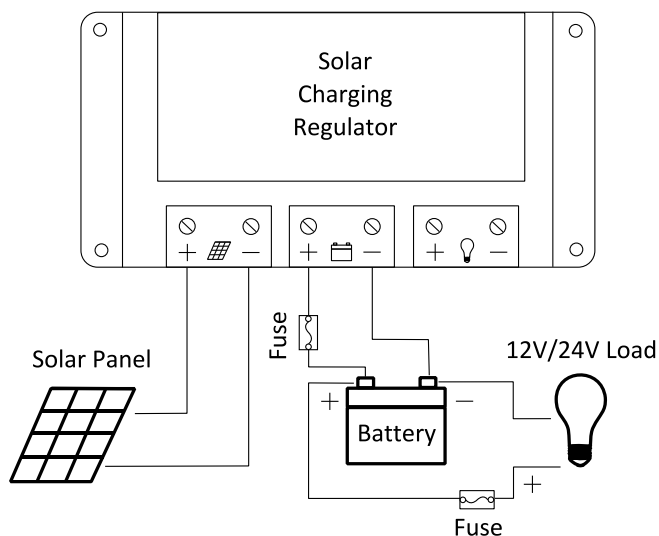

WARNING

The **1R/10Amp/24V/T** regulator should have a **15Amp fuse**. You should check with your battery supplier as to the type of fuse to use as some batteries and/or **banks of batteries connected in parallel** are capable of very high short circuit currents and may require a special **current-limiting fuse**.



WARNING

Note: the fuse assembly should be close to the battery but no closer than 150mm from the battery terminals.



WARNING

Always use appropriate gauge wires. Never exceed the rated **Ampacity** (amp rating) of a wire. Keep in mind that **wires situated in highly insulated environments cannot dissipate heat** and hence will have a much lower Ampacity. This could lead to a fire hazard.

9 Fuse Assembly

Step 1: Choose a conveniently accessible, rain sheltered location for the fuse assembly.



WARNING

Note: the fuse assembly should be close to the battery but no closer than 150mm from the battery terminals.



For the battery to regulator wire, if you are also connecting the load through the regulator you need to consider max load current not just the max charging current. You may need a substantially higher gauge wire.



Step 2: Measure and cut the **battery to regulator** cables. For the +ve positive line cut the wire at the chosen fuse holder location. Strip and tin solder all wires appropriately in preparation for a lap splice, follow Section 17 below.



NOTE: Before you solder **don't forget to thread all FOUR heat shrink tubes**.
Step 3: Solder the fuse holder in-line at both ends using a lap splice. Tape down ends to hold in place during soldering. **Clean flux residue from the solder using suitable solvent.**



Step 4: Use a heat gun to the heat shrink the first sleeve. You'll need a glove to protect your fingers when you press the hot heat shrink firmly around the wire so that the hot adhesive creates a good seal.




Step 5: Use a heat gun to the heat shrink the second sleeve. The fuse assembly is complete and ready for mounting.




Note: Fuse assembly is only dust proof and should not be exposed to the sun and moisture. Fuse assembly and wire should be fixed in place to prevent wire movement and fatigue. There should be no flammable objects in contact with or above and below the fuse assembly. **If the solder or fuse connections become corroded, or fatigued over time, resistive heating in these connections can result in a fire.** Depending on the installation the entire fuse assembly should be placed in an electrical junction box.

10 Solar Panel Wiring

10.1 Solar Connection Using Twin Core Wire and Connector – for 12V system

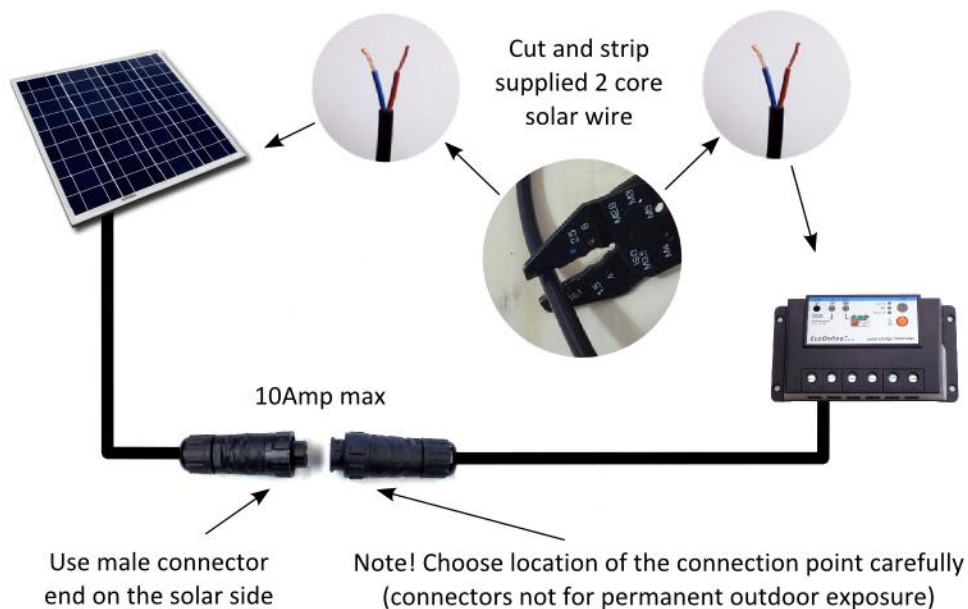

10.2 Solar Connection Using Single Core Wire and MC4 Connectors – for 12V system

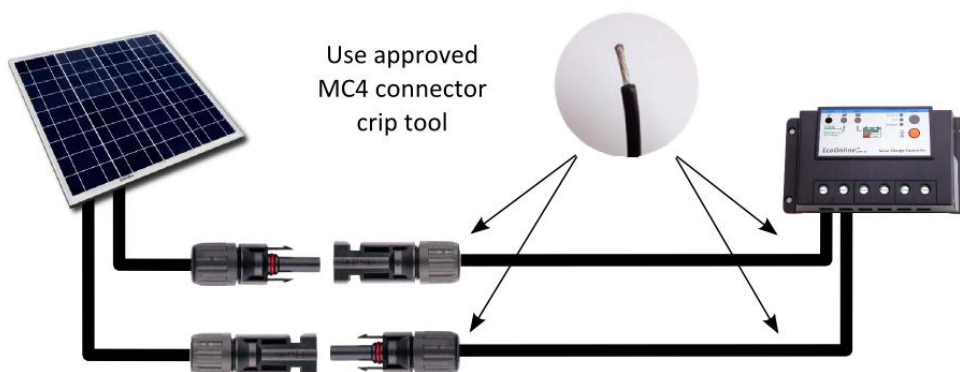


WARNING

NEVER screw clamp solder tinned wires to the junction box terminals. Positive and negative wires must be soldered onto the solar panels terminals in the junction box.




Always check that the solar modules are wired for the same voltage as the battery by using a **multimeter**. Open circuit voltage of a “12V nominal” or 36 cell solar panel or in parallel connected solar panels should be around 21V. This should be doubled for a 24V system.

10.3 In Parallel Connection Using Twin Core Wire – for 12V system

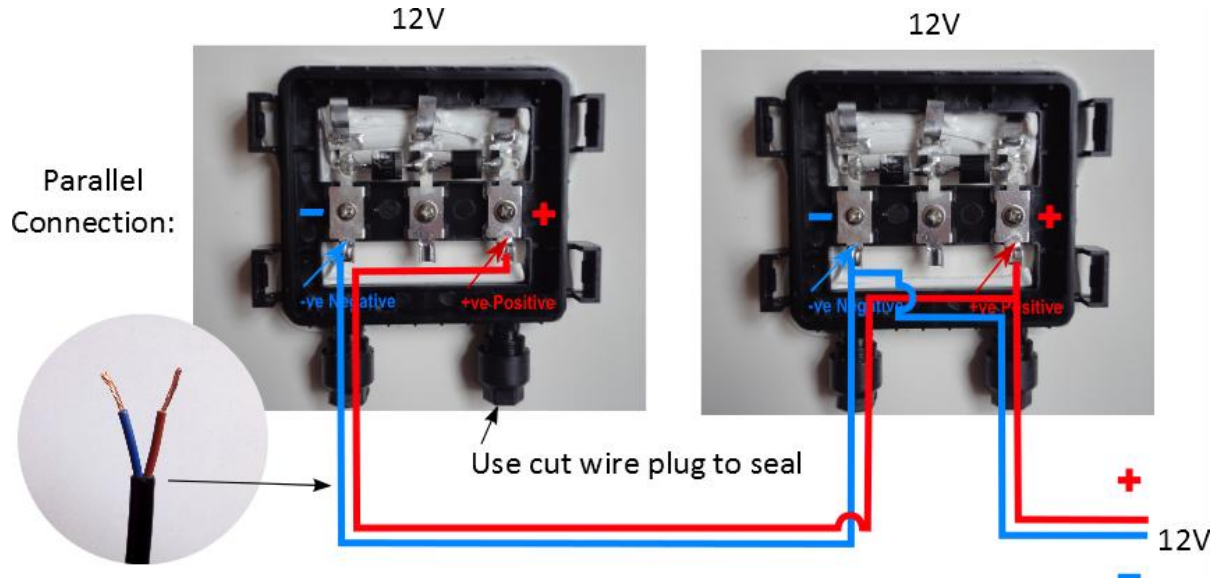


10.4 In Parallel Connection Using Single Core Wire – for 12V system

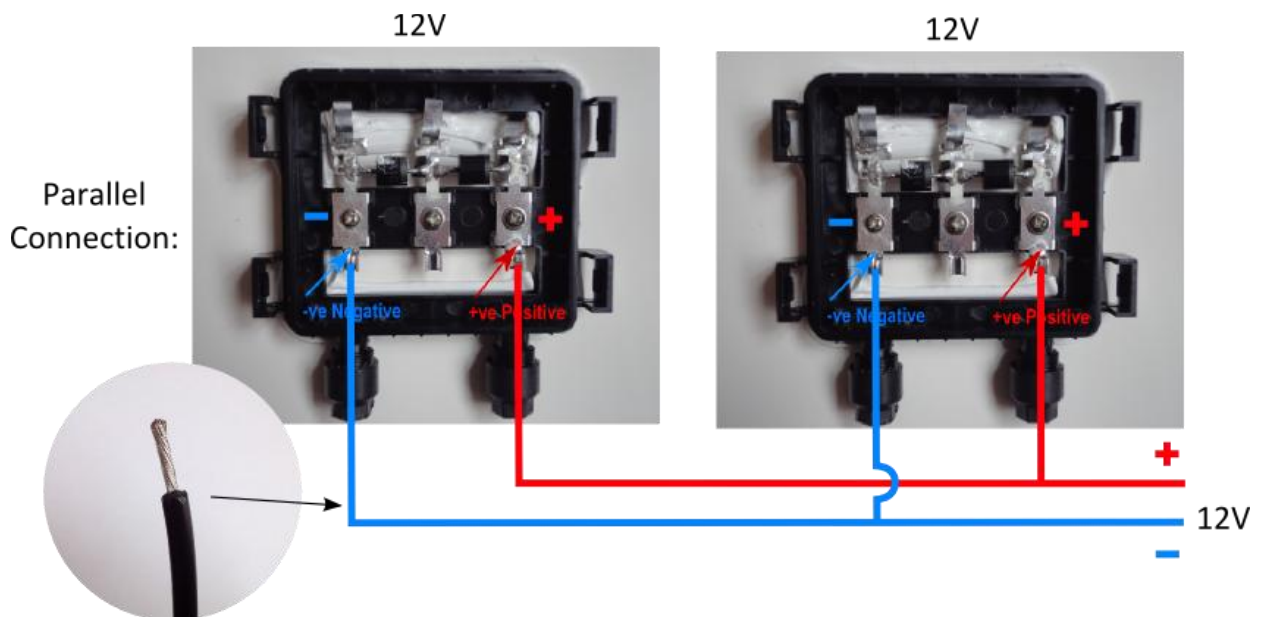


10.5 In Series Connection Using Twin Core Wire – for 24V system

Series Connection:

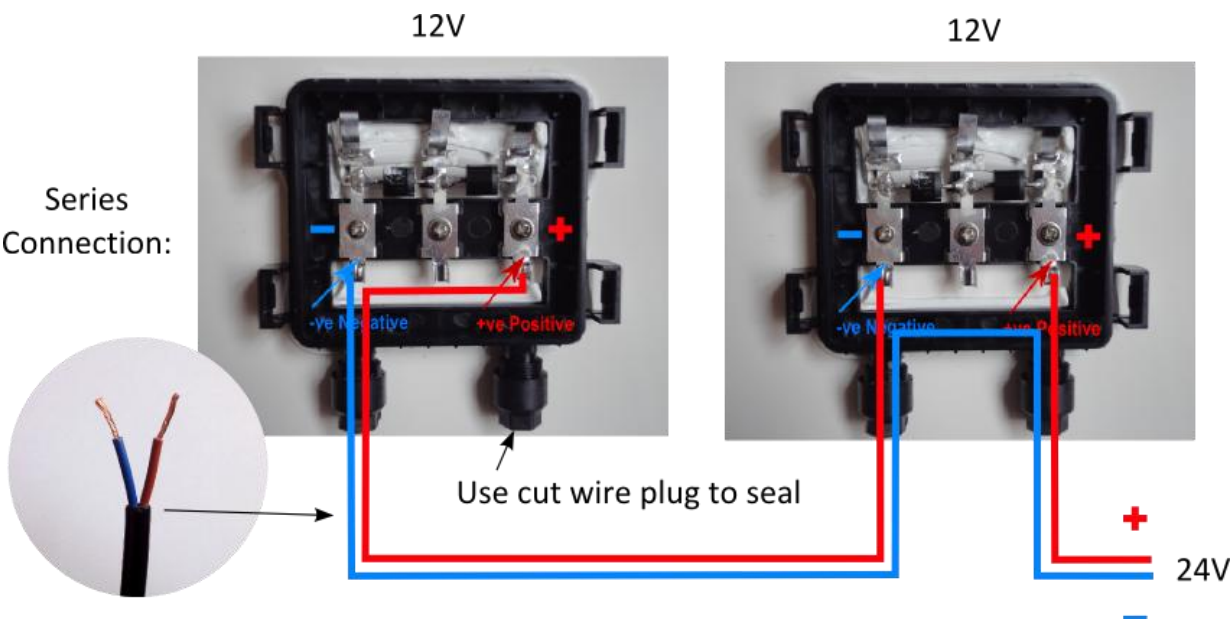

10.6 In Series Connection Using Single Core Wire – for 24V system

Series Connection:

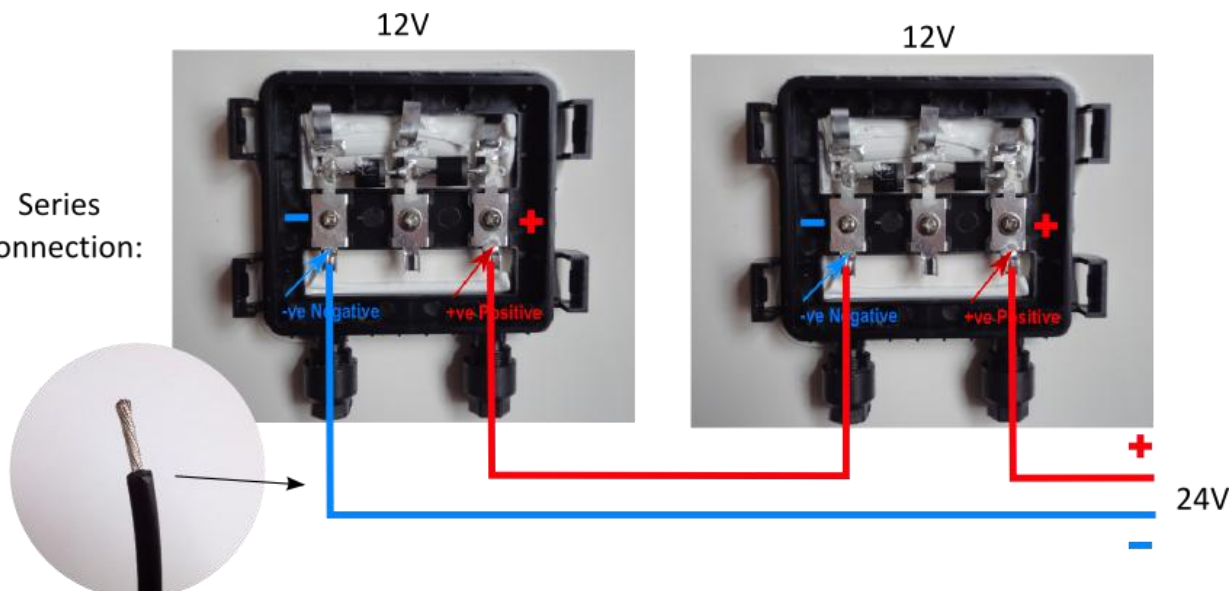

CAUTION

For a 24V system the battery voltage must be greater than 18V for the controller to recognize and set the system as a 24V system.




Read Carefully

Panels wired in series must be of equal power and face exactly the same direction.
Panels wired in parallel can face different directions.

11 Connecting the MC4 Connector

Your solar panel may have come with wire and MC4 connectors on the ends. You will need to source compatible opposing MC4 connector plugs to make connections to the solar panels MC4 connectors (if not purchased).

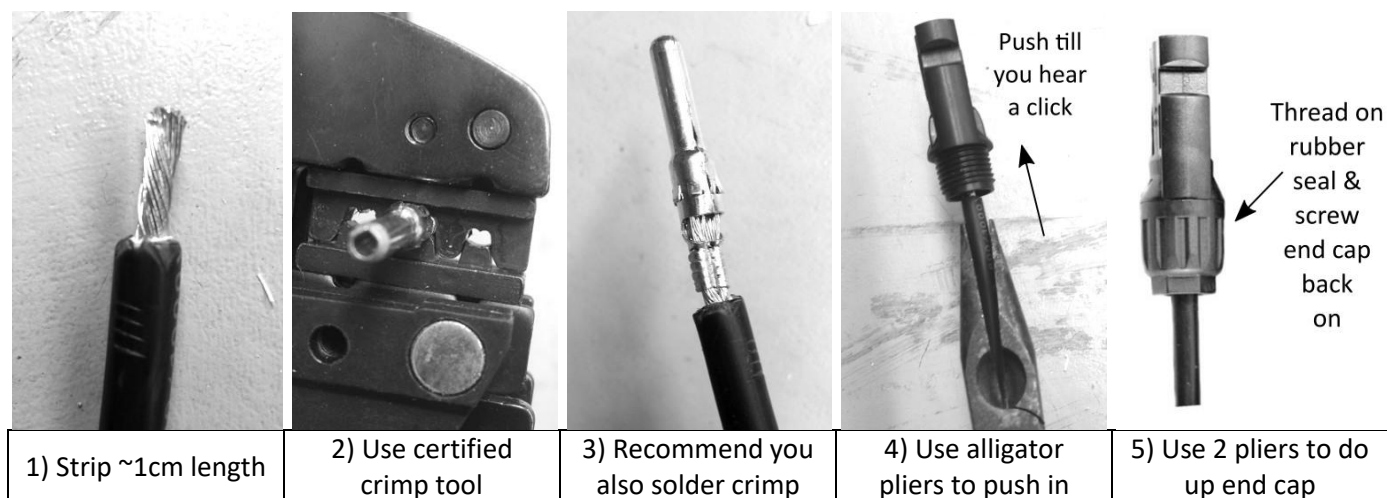

Read Carefully

Note: the **male metal pin** is used in the **female plastic MC4** connector and vice verse for the female metal pin.



WARNING

The MC4 connector metal pin must be crimped onto the solar wire using appropriate Australian Standard crimping tools. We recommend you also solder the crimped connection for better electrical contact, but **only after a secure and tight crimp is performed.**

12 Mounting the Solar Panel(s)

12.1 Mounting on Building Roof or Caravan



WARNING

If the panels are to be mounted on a building roof **always check council/building regulations in your area**. We recommend roof mounting of panels be performed by a qualified professional that can advise on appropriate mounting means for your situation.

Generally, when mounting panel we also recommend:

- Panel(s) should be mounted **as close to the ground as possible** for **ease of maintenance, reduced wind loading, shorter wire runs** and a **reduced chance of lightning strike**
- Electrical connections in junction box **MUST be soldered on**.
- The **underside moisture barrier should not be scratched** as this will severely limit panel lifetime.
- **Do not use self tapping screws** into the side of frame when installing panels; use the bolt holes on the back with locking bolt & nut set or commercially available mounting means.
- Panels should be installed with 20mm to 50mm underside ventilation gap.

12.2 Portable/Folding Solar Camping Panel(s)



WARNING

We recommend portable/folding panels are placed on a secure, flat, **non-flammable surface** exposed to the sun. As a precaution **do not place panels on or in dry flammable grass for example**.



WARNING


For portable/folding panels with a regulator on the back we also recommend you discontinue use if the outside temperature is greater than 40DegC. Note: the regulator and fuse holder must have air flow during use; do not cover system components.



Read Carefully

We recommend the portable/folding panels be put away in very strong wind, or if there is a chance of lightning. In moderate winds a heavy object can be placed on the frame legs to secure against overturning.

13 Mounting the Charging Regulator

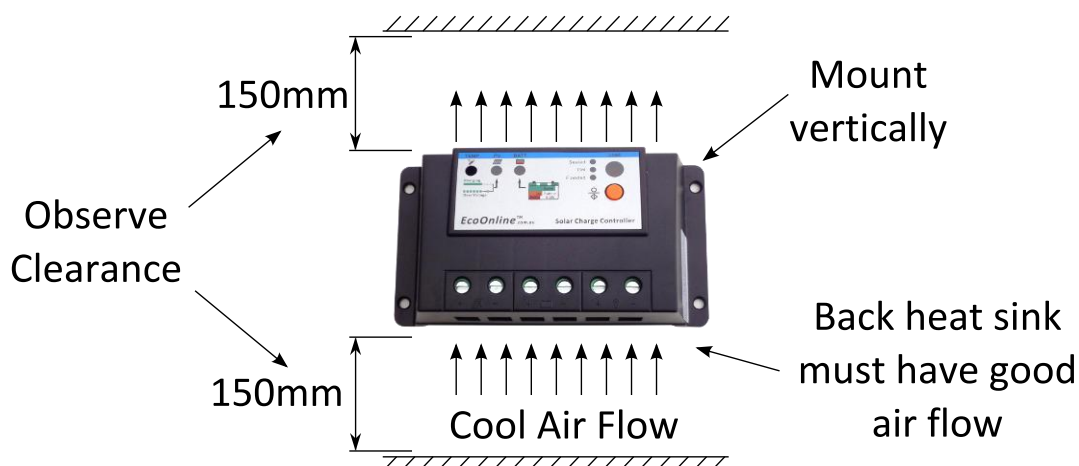

WARNING

The controller must be mounted on a **vertical, non-flammable surface**, in a cool, dry, sheltered location with adequate ventilation. **Note: the heat sink will get hot under operation.** Ensure that there is sufficient air flow around the back of the controller.

14 Regulator Connections

Use 10mm for 10A Reg
Use 13mm for 15-20A Regs



WARNING

When inserting wire into the **10Amp regulator** use **exactly 10mm bare wire**.

DO NOT solder these wire tips before connecting to the regulator. Soft solder can corrode, arch, melt and/or soften resulting in the cables falling out.



WARNING


Unscrew the regulators connection ports **fully** before inserting wire. Make sure the wire is inserted between the regulators gripping teeth and that the connections are tight. Loose connections can generate heat due to excessive resistance. Make sure there are no protruding wire strands. **You should do a pull test to make sure wires can't be pulled out.**



WARNING

For mobile applications, always secure all wiring to a solid surface. Unsecured wires and connections, that vibrate or work themselves loose will become resistive which could lead to excessive heating and/or fire.

15 Wiring and Connection Order

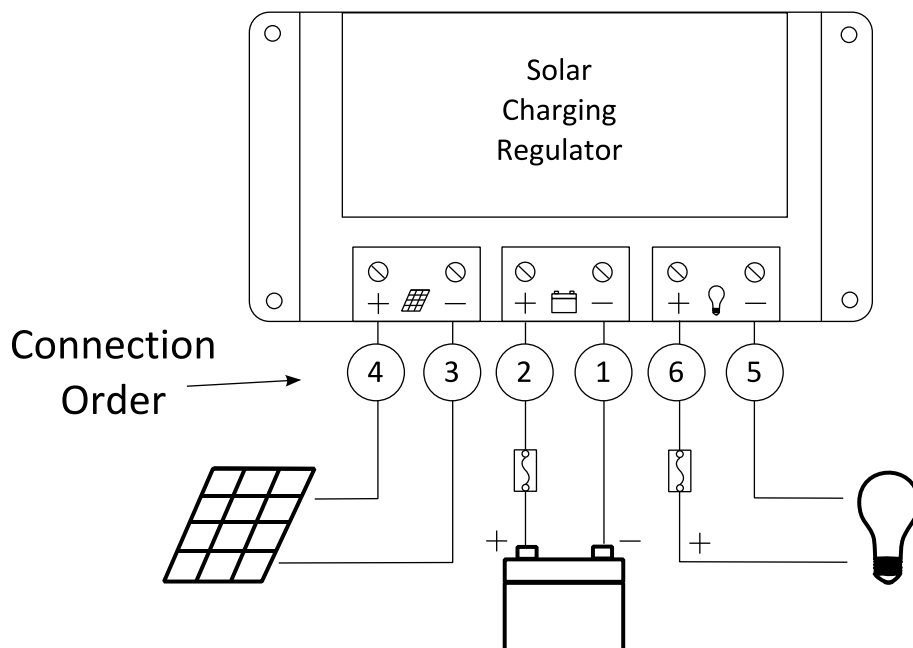

WARNING

Always power the regulator ON by connecting the battery first before making other connections. The regulator's light(s) should come on. This will activate the unit's numerous protection mechanisms.



WARNING

When wiring your system never run a 12-24V cable near or in the same compartment or conduit as other 240V cables due to the chance of mistaking the two cables at some later point in time during installation or servicing.



WARNING

Depending on the installation we recommend wiring be performed by an experienced and/or qualified person such as an electrician.

16 Auto Voltage Selection - 12V or 24V System



WARNING


Note: the controller will sense and set the system voltage from the battery voltage. If the battery voltage is lower than 18V, it will recognize the system as 12V. If the battery voltage is greater than 18V, it will recognize the system as 24V.

17 Lap Splice Soldered Connection




WARNING

A soldered lap splice can be used with this kit to make connection but **ONLY for applications where the wiring and splice joins are to be fixed in place WITHOUT potential for tension or repetitive bending movement across splice joins**. Use ONLY rosin-core solder that is specifically approved for electrical work.

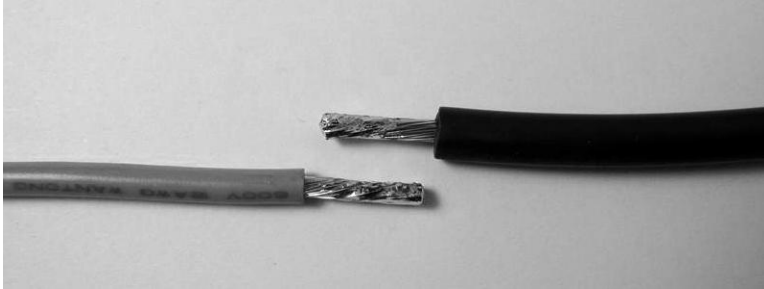

Overlap area should be **at least 3 wire diameters but no more than 5 diameters**. Wire overlap must be well pre-tinned with solder.

- * DO NOT nick wire while stripping insulation
- * DO NOT allow solder to diffuse into the length of the wire more than 5 wire diameters from tip.

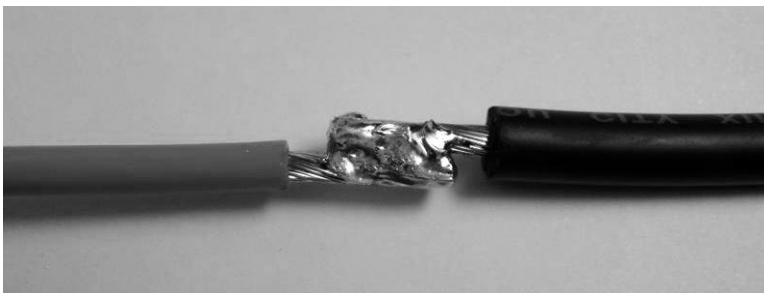


Solder the overlapping wire ends **together across the entire overlap** using sufficient heat to fully melt the solder. Tape down ends to hold in place during soldering. Clean flux residue from the solder using suitable solvent. Cut off any protruding wire strands.

- * DO NOT allow movement during the solder solidification process



Use a heat gun to heat adhesive lined heat shrink sleeve. Press ends to seal.

- * DO NOT use a naked flame or soldering iron to shrink heat shrink sleeve


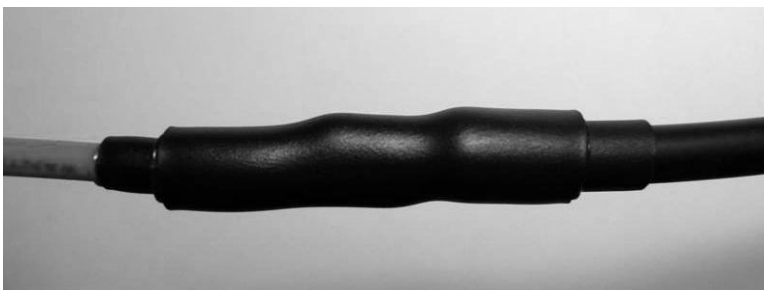


Apply secondary heat shrink sleeve to immobilize the splice to protect against metal fatigue of solder. Press ends to seal.

- * DO NOT expose the stiff splice to tension or metal fatiguing bending forces. When mounting soldered splice should be fixed in place at both ends.

18 Connector Dismantling Procedure (if required)

Definitions

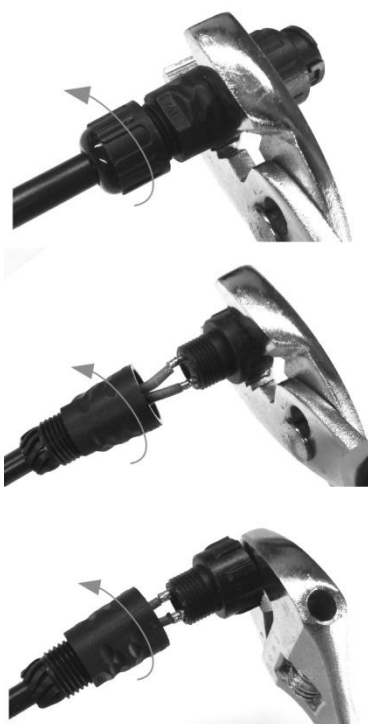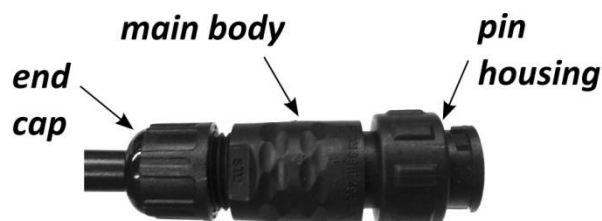

Step 1: Hold connector by **main body** unscrew **end caps** for both connectors (use second pliers if required)

Step 2: With **end cap** removed, hold female connector by **pin housing**, unscrew **main body** (use second pliers if required)

Step 3: With **end cap** removed, hold male connector by **pin housing** using a spanner, unscrew **main body** (use second pliers if required)



Read Carefully

Note: you may need to compress the **main body** of the connector to break the glue seal. This should be performed by gently compressing the **main body** using a pair of pliers until you hear the seal break.



WARNING

Note the 10Amp limit for these connectors. We recommend connectors are not mounted such that they are continuously exposed to rain and water ingress.

19 System Grounding

Grounding the regulator is not technically required for simple camping type stand-alone solar systems.




CAUTION

If for some reason grounding is required it should be noted that this is a **positively ground regulator**. (See below for allowed grounding configurations.)

Grounding
Option 1




OK

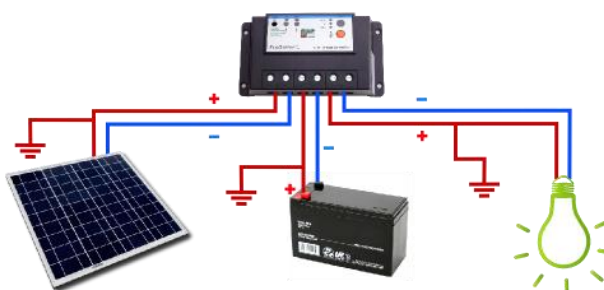

Grounding
Option 2




Caution

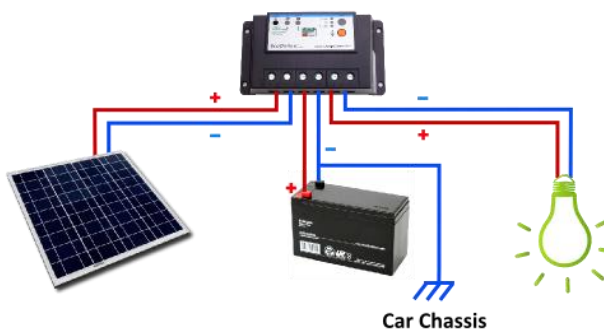

Grounding
Option 3



Caution

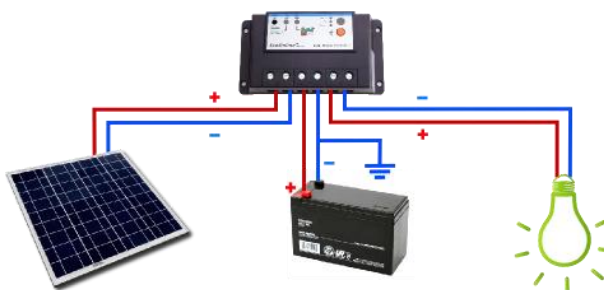



CAUTION

Grounding option 2 and 3 should be used with **caution** as for these configurations the controllers positive wires cannot be allowed make electrical contact to the ground or the car frame.




WARNING

When using Option 3, never mount the regulator near grounded chassis parts and always secure the wires going into the regulator as they could become loose and potentially fall out touching chassis parts.

19.1 Frame Grounding Option




OK

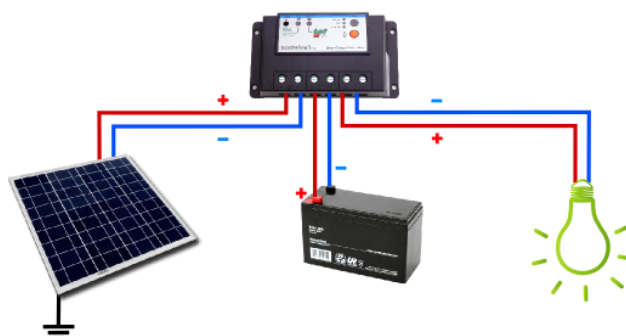


Solar Panel FRAME ONLY Ground

19.2 Forbidden Grounding Options

Not Allowed

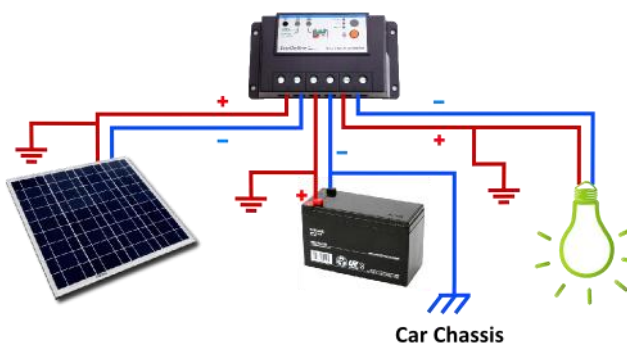

Not Allowed

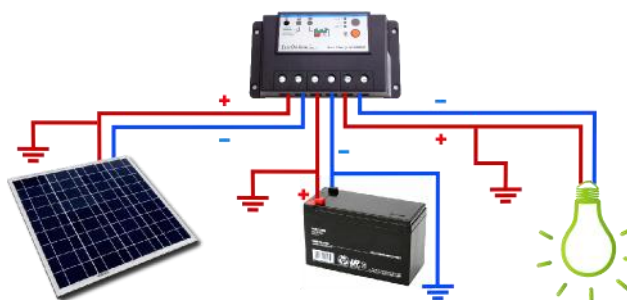

20 Regulator Specifications

General Specifications		
Description	Parameter	
Nominal System Voltage	12VDC	24VDC
Battery Voltage Range	9V-16V	18V-32V
Recommended Solar Panel	36 cell	72 cell
NTTV (Night Time Threshold Voltage)	5V	10V
DTTV (Day Time Threshold Voltage)	6V	12V
Maximum Short Term Current	10A	
Maximum Continuous Current	7.5A	
Charge Circuit Voltage Drop	≤0.26V	
Discharge Circuit Voltage Drop	≤0.15V	
Self-consumption	≤6mA	
Temperature Compensation Coefficient*	-30mV/°C/12V (at 25°C)	
Terminal size	4mm ²	
Operating temperature	-10°C to +45°C	
Storage temperature	-35°C to +70°C	
Humidity	Max. 90%	
Enclosure	IP30	
Regulator Physical Dimensions	length 140mm x width 65mm x height 34mm	


* Compensates equalize, boost, float and low voltage disconnect voltages.

Lead Acid Battery Types			
Regulator selection	SEALED = 1	GEL = 2	FLOODED = 3
Common names	"VRSLAB" also "Sealed" or "Maintenance free"		Lead Acid Battery*
Technical name	Advanced Glass Mat (AGM)	Gelled Electrolyte	Wet Cell Lead Acid
Electrolyte type	Glass mat suspended liquid	Gel suspension	Liquid

* Note some wet cell batteries have sealed tops and are marketed as "maintenance free" however these are still classed as FLOODED type batteries.

Battery Voltage Charging Parameters (at 25°C)			
Charging Parameter	SEALED 12V(24V)	GEL 12V(24V)	FLOODED 12V(24V)
Equalize Charging Voltage	14.6V (29.2V)	-----	14.8V (29.6V)
Boost Charging Voltage	14.4V (28.8V)	14.2V (28.4V)	14.6V (29.2V)
Float Charging Voltage	13.8V (27.6V)	13.8V (27.6V)	13.8V (27.6V)
Boost Reconnect Charging Voltage	13.2V (26.4V)	13.2V (26.4V)	13.2V (26.4V)
Low Voltage Reconnect Voltage	12.6V (25.2V)	12.6V (25.2V)	12.6V (25.2V)
Under Voltage Warning Reconnect Voltage	12.2V (24.4V)	12.2V (24.4V)	12.2V (24.4V)
Under Voltage Warning Voltage	12.0V (24.0V)	12.0V (24.0V)	12.0V (24.0V)
Low Voltage Disconnect Voltage	11.1V (22.2V)	11.1V (22.2V)	11.1V (22.2V)
Discharging Limit Voltage	10.8V (21.6V)	10.8V (21.6V)	10.8V (21.6V)
Equalize Duration	2 hours	-----	2 hours
Boost Duration	2 hours	2 hours	2 hours

21 Operating Instructions

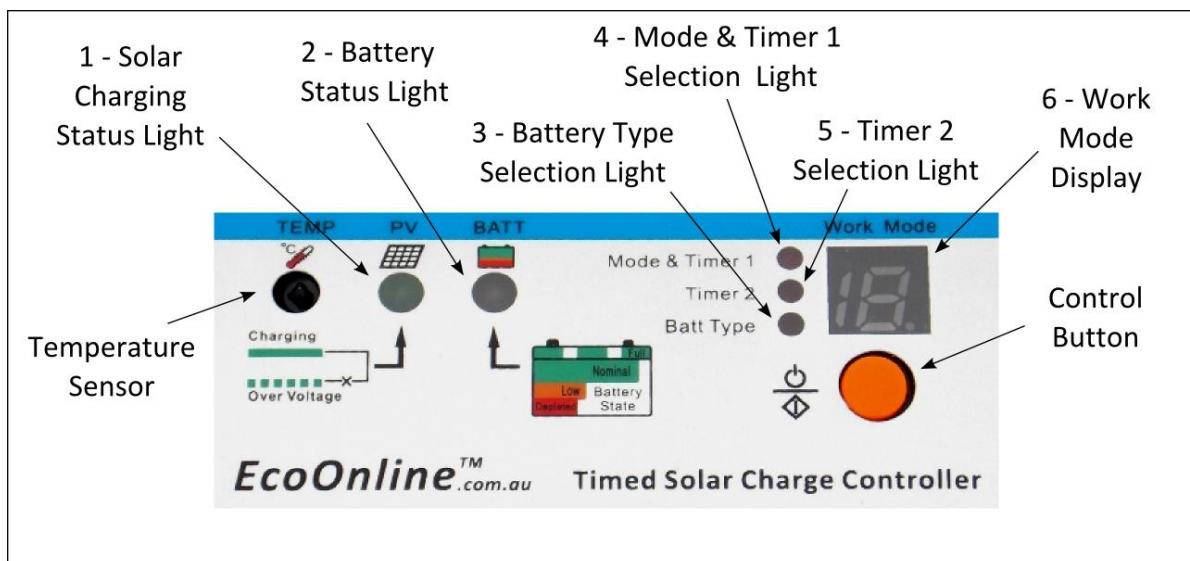

1 - Solar Charging Status Light	
Indicating Light	Charging Status
GREEN - ON Solid	Charging normal
GREEN - Fast flashing	Battery over voltage

2 - Battery Status Light	
Indicating Light	Voltage Status
GREEN - ON Solid	Battery Normal
GREEN - Slow flashing	Battery Full
ORANGE - ON Solid	Under voltage
RED - ON Solid	Depleted

3 - Battery Type Selection Light - ON	
6 - Work Mode Display	Charging Mode
1,2 or 3	SEALED=1 , GEL =2 or FLOODED=3

4 – Mode & Timer 1 Selection Light - ON	
6 - Work Mode Display	Timer Mode
n	Timer disabled
0	Dusk to Dawn, Load will run all night
1 to 15	Load will run for 1 to 15 hours, 10min after sunset
16	Test Mode - Same as 0 without the 10min delay
17	ON/OFF Manual Mode

5 - Timer 2 Selection Light - ON	
6 - Work Mode Display	Timer Mode
n	Timer disabled
1 to 15	Load will run for 1 to 15 hours, before sunrise



Read Carefully

Notes: If **Mode & Timer 1** is set to Dusk to Dawn (0) or Test (16) or ON/OFF Mode (17), then **Timer 2** will be disabled.


6 - Work Mode Display	
Indicating Lights	Controller Status
Red letter "L" ON solid	Overload or short circuit
Red Letter "H" flashing	Controller overheated

21.1 Mode Selection

To program the regulators **Battery Type, Mode & Timer 1 and Timer 2**:

- Press and release quickly (toggle) the **Control Button** to select the **3 - Battery Type Selection Light**.
- Hold down **Control Button** for 6 second until **6 - Work Mode Display** starts flashing.
- **Toggle** to your correct battery type: **1 = SEALED (AGM) 1 = GEL 1 = FLOODED**
- Wait 8 seconds until lights stop flashing. Battery settings are now saved.
- In the same way repeat to program **Timer Selection Lights** if you require the timed load function.
- Else for manual load control **4 - Mode & Timer 1** should be programmed to setting 17.

21.2 Timer Mode Specifics

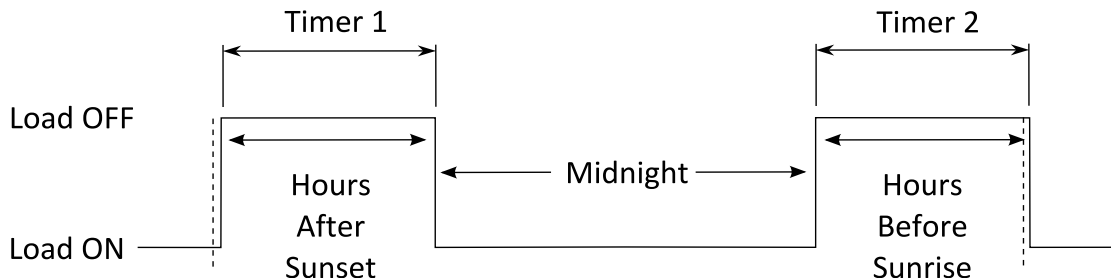

Timer 1: When the solar module voltage drops below the Night Time Threshold Voltage (NTTV) at sunset, the controller will turn ON the load after a 10 minutes delay for the specified number of hours.

Timer 2: The controller will turn the load ON for a specified number of hours before sunrise and turn OFF the load 10 minutes after sunrise (when the module voltage reaches the Day Time Threshold Voltage (DTTV)). (Note the regulator may take a few days to learn and predict sunrise times.)

21.3 Mode & Timer 1 - Dusk to Dawn (0)

When the solar module voltage drops below the NTTV at sunset, the controller will turn on the load after 10 minutes delay. When solar module voltage increases above the DTTV, the solar controller will turn off the load after a 10 minutes delay.

22 System Maintenance



WARNING

Important: before carrying out any system maintenance you **MUST** check for any manual updates and download the latest installation manual from www.EcoOnline.com.au/downloads

The following inspections and maintenance tasks are recommended at least two times per year for best controller performance.

- Check that the controller is securely mounted in a clean and dry environment.
- Check that the air flow and ventilation around the controller is not blocked. Clear all dirt or fragments on the heat sink.
- Check fixings holding wiring in place.
- Check all wires to make sure insulation is not damaged from, UV exposure, frictional wear, moisture/corrosion, fatigue, insects or rats etc. Maintain or replace the wires if necessary.
- Make sure all terminal connections are tight. Inspect regulator connections for loose, corroded, broken, wires or signs of high temperatures such as discoloured or burnt areas.
- Confirm that all the system components are ground connected tightly and correctly if the system is grounded.
- Check that any fuses and fuse holders are not corroded and/or loose and/or warm or hot during operation. Replace as needed.



WARNING

Fatigued, weathered, loose and/or corroded wiring or electrical connections poses a fire risk even at low voltage. The systems wiring should be checked periodically for any wear, cracking resulting from UV damage of insulation on wiring and corrosion of any solder or controller connections. Any affected parts should be replaced at the first sign of damage.

23 Trouble Shooting Guide

